


# Motorola CP200

## 16 Channel/5 Watt, 2 Way Radio

### RADIO OVERVIEW

### PARTS OF THE RADIO

CP150/CP200 Models

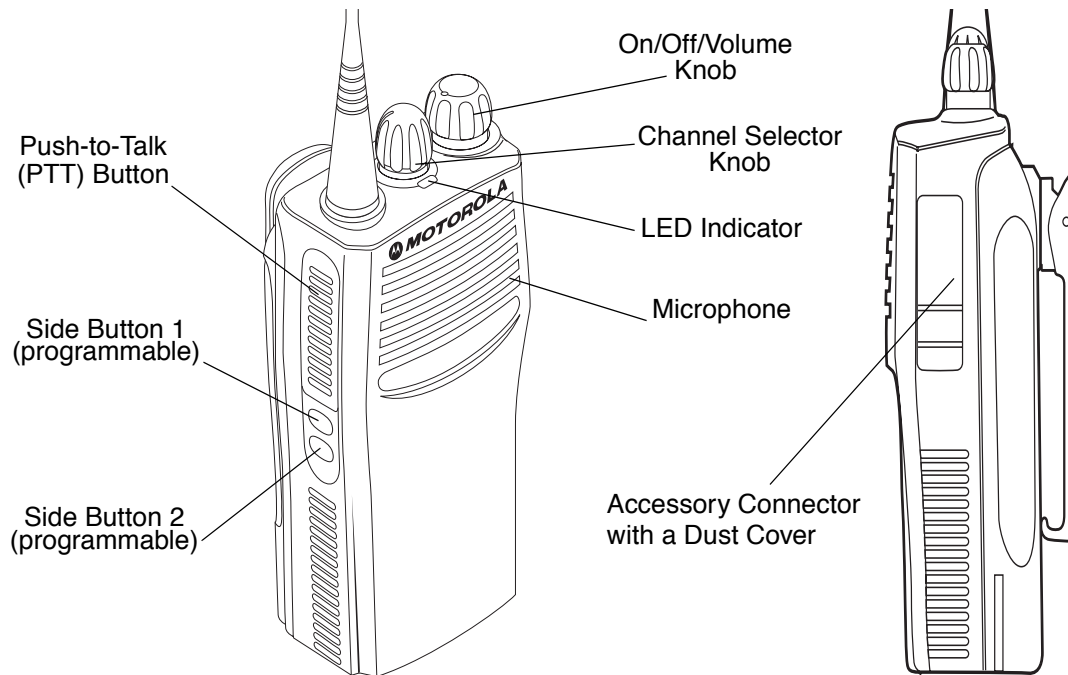

RADIO OVERVIEW

**On/Off/Volume Knob**

Turns the radio on or off, and adjusts the radio's volume.

**Channel Selector Knob**

Switches the radio to different channels.

**Push-to-Talk (PTT) Button**

Press and hold down this button to talk (transmit); release it to listen.

**Microphone**

When sending a message, hold the microphone 1 to 2 inches (2.5 to 5 cm) away from your mouth, and speak clearly into it.

**LED Indicator**

Indicates power-up, transmit, receive, scan status, Call Alert™, Selective Call, Monitor, and battery status.

**Basic Features**

| LED State/Color                    | Indication                           |
|------------------------------------|--------------------------------------|
| Red                                | Transmitting                         |
| Flashing Red                       | Receiving                            |
| <b>Scan</b>                        |                                      |
| Flashing Green                     | Scanning for activity                |
| <b>Call Alert†</b>                 |                                      |
| Flashing Yellow                    | Indicates receiving a Call Alert     |
| <b>Selective Call†</b>             |                                      |
| Flashing Yellow                    | Indicates receiving a Selective Call |
| <b>Sticky Monitor/Open Squelch</b> |                                      |
| Yellow                             | While monitoring                     |
| <b>Low Battery</b>                 |                                      |
| Flashing Red when transmitting     | Low battery level                    |

†Available for 4W and 5W models only.