



Figure 1 Battery Charger

4. When the battery is properly seated in the pocket, the charger LED will light red to indicate that the battery is charging rapidly. When the battery is 90% charged, the LED will begin to blink green to indicate that the battery is trickle charging. When the battery is fully charged, the LED will change to a steady green light to indicate that the battery is fully charged.

**Note:** Even though new batteries might prematurely indicate a full charge (steady green LED), charge the battery for 14 to 16 hours prior to initial use for best performance.

Batteries will charge best at room temperature.

### Battery Locating Rail Adapter

The battery locating rail is a removeable part which constitutes an adapter to accommodate standard and slimline batteries. (Refer to Figure 2)



Figure 2 Battery Locating Rail removed

The charger is shipped with the battery locating rail in the standard battery position.

To change to the slimline battery position:

1. Remove the battery locating rail by pinching inward both sides while pulling from the charger pocket.
2. Turn the battery locating rail around so the back faces the front.
3. Re-insert into the charger pocket.